


# Wiring Diagram

## Kodiak mobile mount



Check the 10 Amp fuse; the fuse holder should be attached to the red wire

Secure the DC power cable within the vehicle avowing any moving parts.

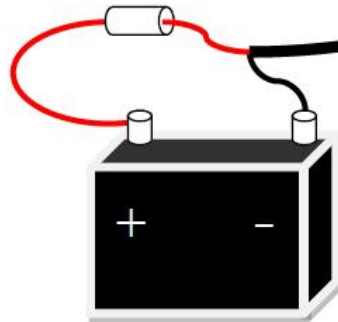


Check your wiring configuration

Red to +VDC

Black to -VDC

Screen blanking cable will have a third black 20 ga wire

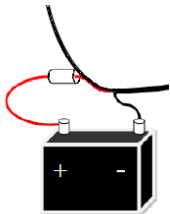

1. The Computer is powered down.
2. Check the condition of the cable before running it.
3. Confirm there is a good 10-amp fuse in the fuse holder.
4. Connected the power cable to the Mounted Computer.
5. Run the cable ensuring it is kept away from moving parts or intense heat.
6. Connect the RED lead to the positive terminal of the battery.
7. Connect the BLACK lead to the negative terminal of the battery.
8. *If you are not using screen blanking skip to number 11*
9. *The Screen blanking DC cable (PN 5-01-30036) includes a third black 20 ga. wire.*
10. *Connect that wire to the accelerator relay. (input 5 – 50V DC)*
11. Test the system by turning on the power and booting the computer
12. Power down the computer, and then secure the cable.

DO NOT OPERATE THE VEHICLE WITHOUT FIRST SECURING THE POWER CABLE